

1. Stand up frames/uprights with plastic base-plates on the ground. (If they are going against the wall, set them slightly out from the wall so that beams can be easily attached onto the back of the frames).




2. Insert first beam into the side of the frames (one person holding each end) whilst supporting the frames. Beams should slot into the holes as shown.



3. Insert pins into the small hole at each end of the beam to secure the beam in place.
4. Repeat for each beam, making sure that each pair of beams are at the same height.



5. To insert wooden board, hold the board over the desired level and lower into the gap between the two beams so it rests on the inside of each beam. Be careful when placing it in as they may fall if not placed in properly. For larger board two people may be required to insert board.

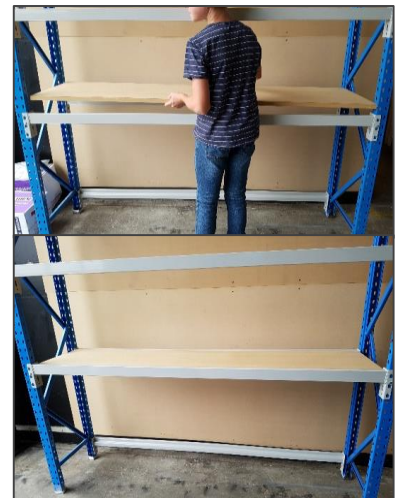

6. Push completed bay to desired position.

IMPORTANT! Wear hard toe boots & two people are needed throughout the assembly.